TRANSONIC

User Manual

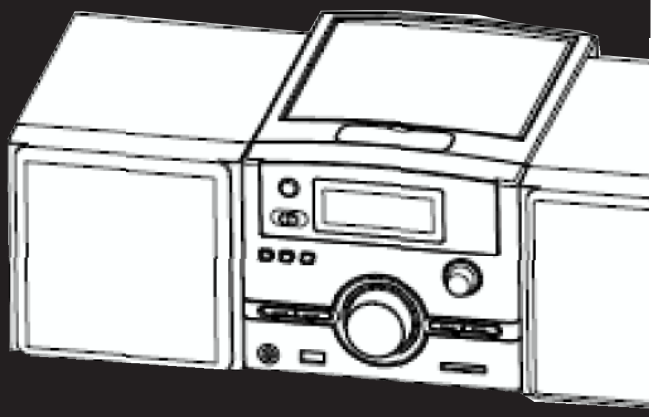

TC2549MSIPOD

It is important to read this instruction book prior to using your new product for the first time.

CE

WARNINGS

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

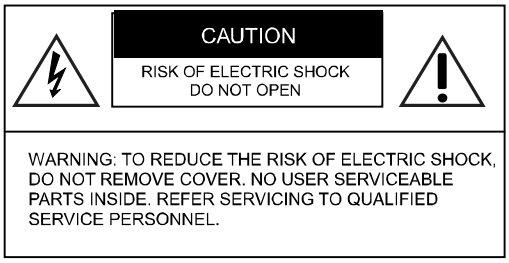
CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

EXPLANATION OF GRAPHIC SYMBOLS

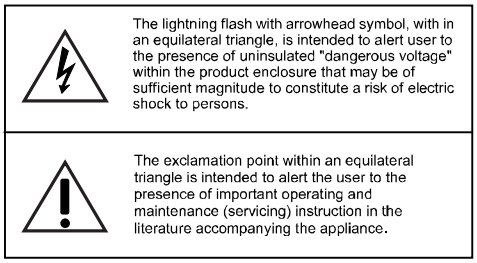
The lightning flash with arrowhead symbol, with in an equilateral triangle, is intended to alert user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instruction in the literature accompanying the appliance.

HAZARD WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT

Class 1
Laser Product
CAUTION - INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS FAILED OR DEFEATED. AVOID EXPOSURE TO BEAM.

This product contains a low-power laser emitter.

PRECAUTIONS FOR USE

To ensure safe, appropriate use of your personal CD player, please follow the advice below:

Location

- Do not use the product in extremely hot, cold, dusty or damp conditions.
- Place the product on a smooth, flat surface.
- Ensure that air is free to circulate through the product. Do not use it in a poorly ventilated place, cover it with a cloth or place it on carpet.

Power supply voltage

- Before using the product, check that its rated voltage is suitable for your mains supply.

Safety precautions

- When you plug in or unplug the power cord, always hold the plug rather than the cable. Pulling the cord could damage it and create a hazard.
- Always unplug the product from the mains if you do not intend to use it for an extended period.
- The On/Off button does not disconnect the product from the mains power supply. To disconnect the product from the power supply, you must unplug the power cord.
- This product should only be used in a horizontal position.

Condensation

- Water droplets or condensation may form inside the CD player if it is left in a warm, damp atmosphere.
- The product may not operate correctly if condensation forms inside it.
- Leave the product in a warm, dry room for 1 to 2 hours to allow the condensation to evaporate.

In the event of a problem, unplug the power cord and contact a qualified repair technician.

Warning:

- Do not expose to dripping or splashing
- No ojects filled with liquids, such as vases, shall be placed on th eapparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Allow suitable distances around the apparatus for sufficient ventilation. Ventilation should not be impeded by covering ventilation openings with items such as newspapers, table cloths, curtains and such like.

Help line

For assistance during normal working hours (9am-5pm, Mon-Fri, New Zealand local time)
call Oriental Pacific International Ltd.
NZ call: 0800 89 85 80
Http://www.orientalpacific.com Email: service@orientalpacific.com

SYMBOLS

The graphic symbols used in this manual or on the back cover of the set mean the following:

Read this manual in full before use.

Class II Double insulated Appliance

The lightning flash symbol is intended to alert the user to the enclosures that contain hazardous voltages.

The exclamation symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

When using any electrical apparatus always observe safety regulations and use basic safety precautions to reduce the risk of fire, electric shock and personal injury, including the following:

Read, Keep and Follow these instructions, heeding all Warnings.

WARNING! Do not remove any cover.
WARNING! No objects filled with liquid, such as vases, shall be placed on this equipment or in any position where liquid may fall into this equipment or any other electrical apparatus.
WARNING! Do not insert any objects into any openings of this equipment or any other electrical apparatus.
WARNING! Do not use this apparatus near water. To avoid the risk of fire or electric shock, do not exposethis apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashes andis strictly for indoor use only.
WARNING! Not for use in Tropical humid climates.
WARNING! Do not immerse in any liquid whilst in use or cleaning. Clean only with a damp cloth,dry with a dry towel. Do not use harsh abrasives as these may damage the plastic parts.
WARNING! DO NOT block any ventilation openings. Keep away from curtains, newspapers and restricted areas. Install in accordance with any specific manufacturer's instructions. Always allow a sufficient gap around the apparatus to avoid overheating.
WARNING! Do not install near any heat sources such as radiators, gas heaters, stoves or other apparatus (including amplifiers) that produce heat. Do not leave in direct sunlight.
WARNING! Do not place any naked flame source, such as lighted candles on any electrical apparatus.
WARNING! Connect to a suitable 230-240V ~ 50 Hz power supply only.
WARNING! Keep out of reach of young children. This apparatus is not suitable for use by young children or infirm persons without supervision. Young children must be supervised to ensure that they do not play with the apparatus. Ensure young childre have enough knowledge to operate the equipment safely if they do have access to this equipment.
WARNING! Do not abuse or damage a power cord. If any power cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. A replaceable cord must be replaced with an authorised replacement from an authorised service agent only.
WARNING! Only use attachments/accessories specified by the manufacturer.
WARNING! Unplug completely from the power source this apparatus during lightening storms or when unused for long periods of time.
WARNING! Attention is drawn to the environmental aspects of disposing of any battery.
WARNING! Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power supply cord or plug is damaged,liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
WARNING! For household use only, this apparatus is not intended for commercial use.
WARNING! If this apparatus is to be used by a third party, please supply these instructions with it.
WARNING! No liability will be accepted for any personal injury or damage caused by failure to follow these instructions.

CLEANING

WARNING! Before you attempt to clean the appliance screen or cabinet, always disconnect the appliance from the mains power and remove the plug from the main power outlet.
Clean the appliance with a soft dry cloth only. Never use any harsh chemical cleaning agent or water as this may damage the appliance.

WARNING! Never allow water splashes to enter the appliance. Do not immerse in water.

WARNING! Never remove the rear cover. Do not attempt to service this equipment.

What's in the box

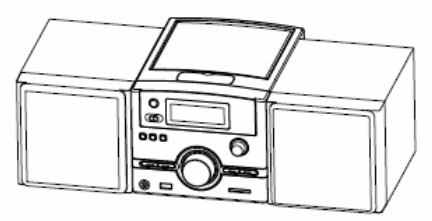

1 x Main unit

2 x External speakers

1 x Remote control (not shown)

8 x iPod dock adaptors (not shown)

(CD and iPod not included)

Contents

1. Getting started
2. Using the radio
3. Using the iPod dock
4. Using the CD
5. Other functions
6. Troubleshooting
7. Specifications

Your Micro System

Front view

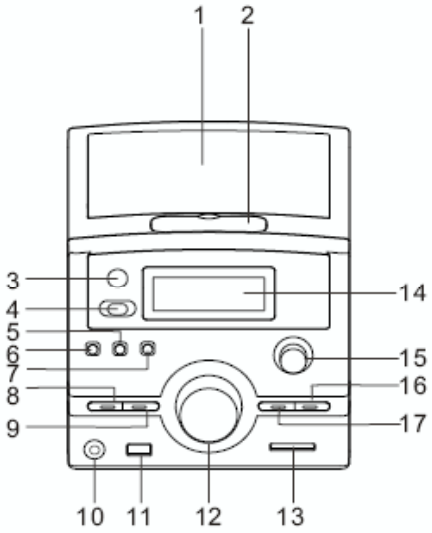

1	CD door	10	Earphone Socket
2	iPOD Dock	11	USB Socket
3	ON/OFF Button	12	Volume Button
4	Function Button	13	SD/MMC Card Slot
5	PROG Button	14	LCD display
6	CD/USB/CARD Button	15	Tuning Knob
7	PLAY Mode Button	16	Play/Pause/ST/MO Button
8	SKIP |<< Button	17	Stop/Band Button
9	SKIP >>| Button		

Your Micro System

Rear View

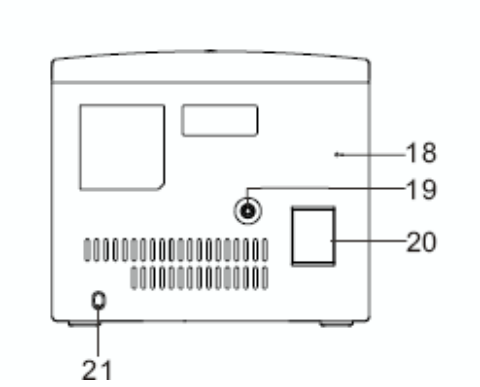

18	FM Antenna	20	Speaker Terminals
19	AUX IN Socket	21	Mains Power input

Your Micro System

Remote control

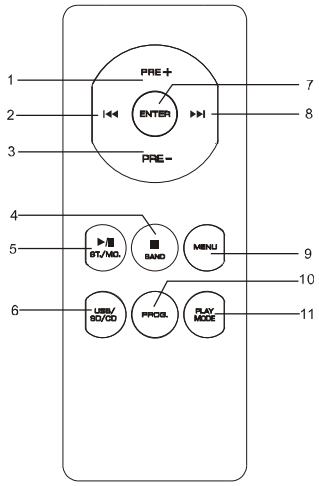

1	PRE + Button	7	Enter Button
2	Skip |<< Button	8	Skip >>| Button
3	PRE - Button	9	MENU
4	Stop/Band Button	10	Prog Button
5	Play/Pause/ ST/MO. Button	11	Play Mode Button
6	USB/SD/MMC Button		

The remote control battery

To preserve the battery life prior to first use, there is a small plastic tab inserted between the battery and the terminal inside the remote control. Please remove this tab before using the remote control. To remove the tab, pull it in the direction of the arrow in the illustration below.

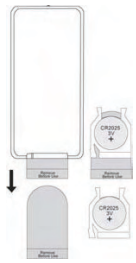

If the operation of the remote control becomes intermittent or unsatisfactory, replace the original battery with a new 3-volt lithium battery.

DON'T FORGET! When replacing the battery, always ensure the same size and type is used. Make sure that the battery polarity is observed. Inserting the battery incorrectly could result in battery leakage or damage to the unit.

Connecting to power

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

Mains (AC) operation

This unit is designed to operate on AC 230V 50Hz mains supply only. Connecting it to other power sources may damage the unit.

Basic operation

1. Press the ON/OFF button on the main unit to power on the unit.
2. Slide the FUNCTION button on the unit to select Radio mode.
3. Select the frequency band you want by pressing the BAND button.
4. Tune to the station you want by turning the TUNING knob.
5. To turn off the unit, press the ON/OFF button.

Antenna

DON'T FORGET! For optimum FM reception there is a built-in FM antenna wire on the back of the unit. Move the wire around to get the best reception. This unit is also has a built-in directional ferrite antenna. If MW reception is poor, you may have to move the unit slightly until you find a better position that gives you a better reception.

FM and FM Stereo reception

When the unit is tuned in to a stereo broadcast with a good signal, "((ST))" will be shown in the display.

If an FM station is received, but has interference, it is recommended to switch to Mono mode using the ST/MO button.

Inserting and removing your iPod

1. Press the ON/OFF button.
2. Slide the FUNCTION button to select iPod mode.
3. Carefully Insert your iPod into the iPod Dock.

DON'T FORGET! Use the correct i-Pod dock adaptor for your model, taking care not to damage the connecting pins.

DON'T FORGET!Always ensure care is taken when inserting or removing your iPod from the connector.

Playback and charging your iPod

1. Select iPod mode using the FUNCTION button.
2. Insert your iPod into the dock and press the PLAY/PAUSE button to start playback.
3. Press the PLAY/PAUSE button to pause playback. Press this button again to resume playback.
4. When your iPod is docked in the unit, the internal battery will be charged.

Using the iPod menu system

1. Select iPod mode using the FUNCTION button.
2. Carefully insert your iPod unit into the dock.
3. Press the MENU button once on the remote control to enter the iPod menu system.
4. Press "PRE+", and "PRE -" on the remote control to navigate the various features of the iPod menu system as you would when using the iPod control buttons.
5. Press the ENTER button on the remote control to confirm your selection

04 Using the CD

Handling CD's

To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.

Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth before use.

DON'T FORGET!Never use chemicals such as record sprays, antistatic sprays, benzene, or thinners to clean compact discs. These chemicals can damage the disc's surface.

Loading and unloading CD's

1. Press the ON/OFF Button to turn on the unit.
2. Slide the FUNCTION button to select CD mode.
3. Open the disc compartment by pressing the door release catch marked "OPEN / CLOSE" on the CD door.
4. When the disc compartment has opened, remove a disc from its case and place it carefully onto the tray with the label side facing outwards.

DON'T FORGET!Do not put anything except a compact disc into the compartment. Other objects may damage the unit.

5. Presss down on the CD door until it latches into the closed position.
6. When the compartment is fully closed, the disc will be read automatically. The total number of tracks on the CD will appear on the LCD display.

DON'T FORGET!Keep the disc compartment closed when not in use to prevent dirt and dust from entering the mechanism. Never place more than one disc into the disc compartment at any time.

Playing CD's

1. Select CD mode with the Function button.
2. Press the PLAY / PAUSE button once to begin playback of the CD from the first track.
3. Press the PLAY / PAUSE button once to pause playback of the CD; the track number will flash in the display.
4. To resume playback, press the PLAY / PAUSE button again.
5. To stop playback, press the STOP button.

Selecting a different CD track

1. Press the SKIP buttons to skip forwards or backwards through the tracks on the CD.
2. Press and hold the SKIP buttons to fast forwards or backwards through the current track.
3. When the desired part of the track is reached, release the button and playback will resume.

Play Mode

1. To repeat the current track, press the PLAY MODE button once. "REPEAT" will show in the display.
2. To repeat the entire disc, press the PLAY MODE button twice. "REPEAT ALL" will show in the display.
3. To cancel repeat play, press the STOP button or press the PLAY MODE button until the repeat indicator disappears.

Random CD playback

1. In play mode press the PLAY MODE button on the remote control three times, “RANDOM” will show in the display, and the tracks will be played in a random order.
2. To cancel radom play, press the STOP button or press the PLAY MODE button until the random indicator disappears.

Playing MP3 CDs

When playing a CD encoded with MP3 or WMA files, the functions available and operations are identical to those when playing a standard CD.

Intro

1. In play mode press the PLAY MODE button four times, "INTRO" will show in the display, and the first 10 seconds of each track will be played sequentially.
2. To cancel INTRO, press the STOP button or press the PLAY MODE button until the INTRO indicator disappears.

Programmed CD/MP3 playback

Up to 20 tracks can be programmed to the internal memory in any order. You may also store the same track more than once.

1. In stop mode, press the PROG button. "PO1" will show in the display.
2. Select the desired track by pressing the Skip |<< or >>| buttons.
3. When the desired track is chosen, press the PROG button to store the track.
4. "PRO2" will show in the display. Repeat steps 2 and 3 to select and store up to 20 tracks.
5. To listen to stored tracks, press the PLAY/PAUSE button. Use the Skip |<< >>| buttons to skip forwards or backwards through the tracks.
6. To clear the memory, press the STOP button twice.

USB/SD/MMC playback

1. Slide the FUNCTION button to select CD mode.
2. Press the USB/SD/CD button to select USB or CARD mode.
3. Connect a USB device or memory card into the appropriate socket on the front of the unit.
4. The display will show the total number of tracks.
5. The functions available and operations are identical to those when playing a CD.

AUXILIARY IN

Connect the audio output socket of your auxiliary sound source (TV, VCR, DVD Player, Cassette Deck, Mini Disc player, etc.) to the AUX IN socket on the back of unit.

DON'T FORGET! The auxiliary function can only be used when there is a connection made to the AUX IN socket from another source.

DON'T FORGET! The connection cables are not included.

1. Press the ON/OFF button to Power On the unit.
2. Slide the FUNCTION button to select the AUX function.
3. Turn your auxiliary source 'ON' and operate it as usual. The sound from the auxiliary source can be heard through the speakers.
4. Adjust the volume level to the desired listerning level.

Earphone Socket

Connect earphones to the socket marked "PHONES" on the front of the unit. The sound output to the speakers will be muted while you listen with earphones connected.

Problem	Possible cause	What to do
Radio		
Noise or sound distorted on MW or FM	Station not tuned properly for MW or FM FM: the FM antenna wire is not extended. MW: The built-in ferrite bar antenna is not positioned correctly	Fine tune MW or FM broadcast station Extend FM wire antenna Reposition the unit until the best reception is obtained.
FM Stereo indicator doesn't light up	Mono mode is selected You have tuned in to a mono station The signal is too weak	Press ST/MO button Retune to another FM station Retune to another FM station
No sound in MW or FM mode	Unit not in radio mode Volume is at the minimum position	Slide the FUNCTION button to select Radio mode. Adjust volume level
CD/MP3 Player		
CD Player will not play	Unit not in CD mode CD is not installed or installed correctly	Select CD mode Load a CD and check it is the correct way round.
CD skips while playing	Disc is dirty or scratched	Wipe the disc with a cloth or use another disc

07 Specifications

Model number	TC2549MSIPOD
Power supply	AC: 230V ~ 50Hz
Power consumption	25W
Radio frequency coverage	FM : 88 - 108 MHz MW: 530 - 1600 KHz
Speaker system	4 Ohm
Power output Watts	2W x 2
Dimensions	Unit: 170(W) x 240 (D) x 145 (H) Speaker: 145 (W) x 196 (D) x 140 (H)

IMPORTANT! Due to continual revision and improvements to our products design, specifications are subject to change without notice.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of one year from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALLY LIMITED TO 90 DAYS

Type of Appliance:_____

Model No.:_____ Purchase date:_____

Product Purchased From:_____

Your Name:_____

Address:_____

_____

Phone Number:_____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.